


LEGEND

REQ	SYM	DESCRIPTION
1	□	OXYGEN OUTLET
1	A	AIR OUTLET
1	V	VACUUM OUTLET
1	E2	DUPLEX RECEPTACLE, 8300 IVORY, 20A, 125V, H.G., NORMAL POWER
2	E4	DUPLEX RECEPTACLE, 8300 RED, 20A, 125V, H.G., EMER. POWER

NOTES:

- ① EACH ELECTRICAL SERVICE REQUIRES A 1/2" FLEXIBLE CONDUIT (BY OTHERS) OF SUFFICIENT LENGTH TO REACH THE ELECTRICAL SERVICE TERMINATION COMPARTMENTS BELOW AND IS TO HAVE A RIGHT ANGLE CONNECTOR AND SINGLE GANG COVERPLATE FOR CONNECTION TO THE SINGLE GANG ROUGH-IN BY OTHERS.
- ② MEDICAL GAS TERMINATIONS CONSIST OF 3/8" O.D. PIGTAILS ONLY (POINTED DOWN) FOR CONNECTION BY OTHERS.
- ③ WOOD STAIN FINISH: TO BE DETERMINED.

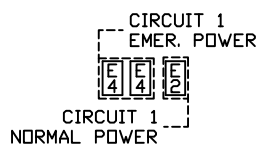

WIRING DIAGRAM
GROUND WIRING TO BE #10 GREEN STRANDED COPPER

MODULAR 500 EAST BRITTON ROAD
SERVICES COMPANY OKLAHOMA CITY, OK 73114

PROJECT


REVISED

AMBIANCE™
INFANT HEADWALL


SCALE: = 1'

DATE _____ DRAWN BY _____ DRAWING # PB-115


LOW ACUITY
-- REQ'D: -- AS SHOWN
-- -- OPPOSITE

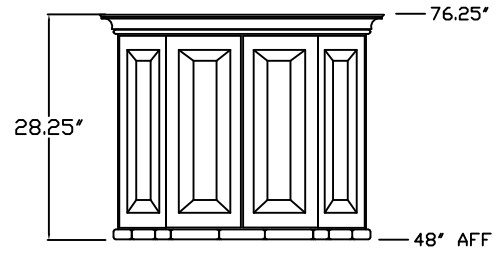

FRONT VIEW WITH DOORS CLOSED

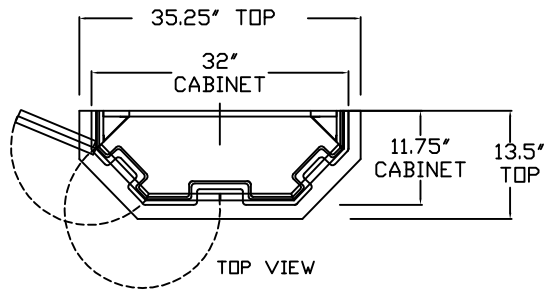

TOP VIEW

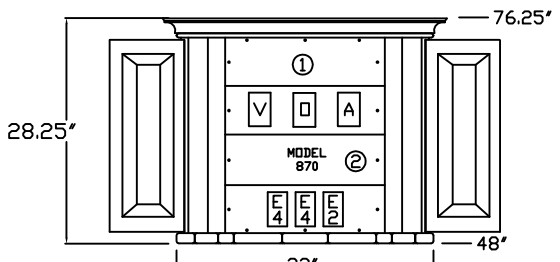

FRONT VIEW WITH DOORS OPEN